

# MANUAL INSTRUCTIONS

## Step 1: Before activation.

Before performing the personalized fingerprint activation, the system will allow you to open the product with any fingerprint (only if it is charged). Once Step 2 and 3 are performed, it will only open with the fingerprint you decide to activate.

Charge the product for 2 hours before performing the fingerprint configuration. To charge it open the charging tab (see picture below) and insert the Type C cable (comes inside the product). Once charging, the light button will appear ● green while charging, and will turn off once fully charged.

◀ IN 5V Open the tab and charge for 2 hours

## Step 2: Activation process of main fingerprint (Administrator Fingerprint).

Close the zipper. Press and hold the main fingerprint you will use with the BESTON product (called administrator fingerprint) until the ● blue light turns on continuously (see picture):



Once the blue light is turned on permanently, include the same fingerprint repeatedly, each time at a slightly different angle as many times as necessary (usually between 10 and 20 times) until the light turns ● green for two seconds. The main fingerprint (administrator fingerprint) is now activated and you can start using the BESTON product with that fingerprint only.



## Step 3: Activation of additional prints (up to 10 prints).

Close the zipper. Press and hold (5-7 seconds) with the main fingerprint (administrator fingerprint) until the light flashes ●●●● blue and red.



Include the main fingerprint (administrator fingerprint) again until the light stays permanently ● blue.



Once the blue light is on permanently, insert the new fingerprint you want to include repeatedly, each time at a slightly different angle as many times as necessary (usually between 10 and 20 times) until the light turns into color ● green for two seconds. The additional fingerprint is now activated and can be used to open the BESTON product.



## Step 4: Battery management.

The battery has a life per charge of 3000 uses or 3 months. We recommend charging it every 2 months. To see the battery level, put your fingerprint and if the light flashes ●●●● green, is that it has a low battery level, **we recommend charging it or not close it with your fingerprint until you charge it.** In case of running out of battery, with only 10 seconds of charging it can be opened.